



CODE: 7095W

LCD Day of the Week Calendar Clock

Instruction Manual for LCD calendar clock model 7095W

1. Remove the battery cover at the rear of the clock and insert the 2 × AA size batteries, ensuring the correct polarity. Place the battery cover back into position.
2. The time display will show 0:00 and in order to set the clock to the correct time, press the SET button to set the year Using either the UP or DOWN buttons. Then press SET before repeating the sequence for the month, date, hour and minutes.
3. To change between a 12 and 24 hour display, press the UP button.
4. The batteries should last for a minimum of 12 months, after which replace them with fresh cells.