





Automatic Calendar With Clock

MODEL BQ-38 POWER SUPPLY 1.5V BATTERY SIZE C (R14) SELF-REGULATING EVEN FOR LEAP YEARS' FEBRUARY OPERATION GUIDE

*TO SET THE TIME

- (1) On backside of the case, a time-adjusting knob is located on the back of movement inside a small door.
- (2) When setting the time, look through the AM/PM indicator, so as to identify that the hour-hand points to correct time where corresponding to AM or PM (see next paragraph below).
- (3) AM/PM indicator locates in front of dial plate of time, at right-hand side of 3 o'clock position. The particular formats shown below represent various times.

				\bigcirc	\bigcirc	\bigcirc		
Time:	12 M.N.	3 A.M.	6 A.M.	9 A.M.	12 N.	3 P.M.	6 P.M.	9 P.N

Moving downward repeatedly the slide knob at rear side to the desired "Day" and "Date".
*ADJUSTING THE "MONTH"

Moving the "Month" slide knob at rear side to display JAN where the adjacent small window shows the correct number required for the year according to the following table:

NUMBER	YEAR	YEAR	YEAR	YEAR
(1)	2021	2025	2029	2033
(2)	2022	2026	2030	2034
(3)	2023	2027	2031	2035
(4) Leap year	2024	2028	2032	2036



Then set the required "Month".

Example: JAN along with 4 represents January 2024

Mfg. by Twemco Industries Ltd. H.K.

Made in Hong Kong

^{*}ADJUSTING "WEEK DAY" AND "DATE"