



CODE: EC-W031

LED WOODEN CLOCK WITH BLUETOOTH SPEAKER



SETTING INSTRUCTIONS

LONG Press the “SET” button on the back of the unit until the numbers start flashing - then release the button

SHORT Press the SET button to toggle through the settings which are in the order below:
(note: if you do not touch the SET button for about 15 seconds the clock will return to normal)

SETTING ORDER:

- 1. YEAR** press UP/DOWN buttons to change the number
- 2. MONTH & DATE** press UP/DOWN buttons to set the month then the date
- 3. 12 or 24 HOUR** press UP/DOWN buttons to toggle between 12 or 24hr options.
With the 12hr setting a dot to the left of the time will appear indicating PM time.
- 4. TIME** press UP or DOWN buttons to set the time
- 5. ALARM** There is the option of 3 Alarms (A1 A2 A3)

To set the first alarm toggle the UP/DOWN buttons to set the **alarm on on:A1** (a dot to the right of the time will indicate the alarm is set) or **alarm off --:A1** (alarm off). Next press SET to move to the alarm setting. Select UP/DOWN to set the alarm noting in 12 hr format a PM setting will show a dot on the left side of the screen. Toggle through the next two alarms and set if required. The final option is to set the **alarm/s on on:E** or **--:E alarm/s off**

ALARM RUNS FOR 1 MINUTE - PRESS ANY KEY ON THE BACK OF THE CLOCK TO TURN OFF THE ALARM

TIME DISPLAY

Option of TIME and TEMPERATURE display only or TIME/TEMPERATURE carousel with YEAR/MONTH/DAY

SHORT Press the "SET" button on the back of the unit for

dP-1 The TIME/TEMPERATURE continuously cycle through (carousel) with YEAR/MONTH/DAY

dP-2 Only the TIME and TEMPERATURE will be displayed

BLUETOOTH

LONG Press the "ON/OFF" button on the back of the unit and an **upward tune** should sound. In the Bluetooth settings on your phone "**WOOD SHOW SPEAKERS**" should appear on the bluetooth list as "connected" Test with an audio app and adjust volume via the phone.

To turn off **LONG Press** the "ON/OFF" button on the back of the unit and an **downward tune** should sound.

To answer the phone through the bluetooth speakers **SHORT Press** the "ON/OFF" button

POWER SAVING MODE (OR VOICE MODE)

SHORT Press the "DOWN" button on the back of the unit to turn **VOICE MODE on on:Sd**

In approximately 15 seconds the screen will go blank. To reactivate the time make a sound or clap.

To turn function off **SHORT Press** the "DOWN" button on the back to this setting **--:Sd**

TEMPERATURE MODE SETTING

SHORT Press the "UP" button on the back of the unit to toggle between Celsius or Fahrenheit

BRIGHTNESS CONTROL

LONG Press the "UP" button on the back of the unit to bring up brightness options L1 L2 L3

To adjust between levels press the "DOWN" button for less bright and the "UP" button for more bright

WIRELESS CHARGING

Place your iPhone (8 or above) or Android phone on the main unit to start charging. Note the clock needs to be plugged into mains power to charge the phone.

TROUBLESHOOTING

Bluetooth won't work with my phone..

On the clock, check that Bluetooth is turned on **LONG Press** the "ON/OFF" button and an **upward tune** should sound. After about 6 seconds another beep will sound from the speakers to show it's activated.

In the settings on your device select "BLUETOOTH" and check to see "**WOOD SHOW SPEAKERS**" is on. You may need to allow access to your local network in settings.

Choose an audio app on your device (Spotify, Apple Music, YouTube Music, Audible etc) and press play. If no sound comes out, check the volume is up on your device.

To change the sound quality adjust the settings in the app on your device.

The screen has gone blank

The clock is set to Power Saving Mode and can be reactivated by a loud voice or clap. To turn this function off **SHORT Press** the "DOWN" button on the back to this setting **--:Sd**

The alarm won't work

Look for a white dot between the time and temperature to see if alarm is set. If it is blank, follow the setting instructions for Alarm.

If the settings are in a 12hr format, check that the alarm is set for AM or PM (a dot to the left of the time will appear indicating PM time)

Check the **alarm is on on:A1** not **off --:A1**

To turn it on toggle with the UP/DOWN buttons while in the settings section