




CODE: CPO608

Dementia Calendar Clock

Remove the clock and AC adaptor from the package .
 Plug the input connector of the AC Adaptor into the DC-IN hole on the back of the device .
 Plug in the clock and press the ON/OFF switch or just wait a few seconds .
 In 5 seconds the clock will display the exact time /day of the week /month and day cycle .
 The clock can be used as a desk clock with adjustable bracket or wall mountable .
 Now you may enjoy the Digital Calendar Day Clock .

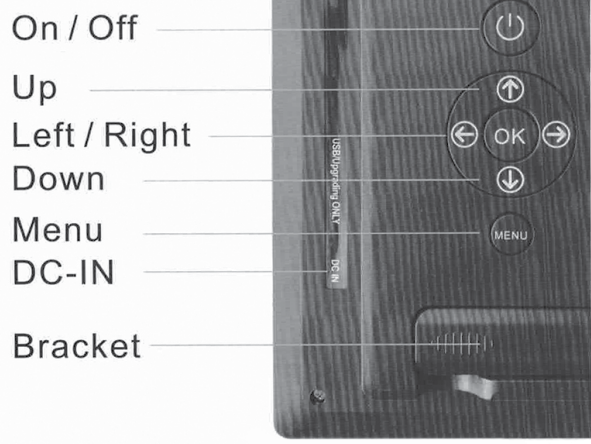

HOW TO SET

Set Time	< 05:29 PM >
Set Date	03-28-2019
Time Mode	12 Hours
Date Mode	Month-Day-Year
Language	English
Auto Dimming	Off

1. SET TIME:

Press the MENU button to access the settings page. Press the UP/DOWN button to access the 1st line titled Set Time. Press the RIGHT/LEFT button to select the field to be modified. When the field is underlined with blue, use the UP/DOWN button to adjust the number. After the changes are complete, press the OK button to save the settings. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings.

2. SET DATE:

Press the MENU button to access the settings page. Press the DOWN button to access the 2nd line titled Set Date. Press the RIGHT/LEFT button to underline the field to be modified. When the field is underlined with blue, use the UP/DOWN button to adjust the number. After the changes are complete, press the OK button to save the settings. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings.

3. TIME MODE:

Press the MENU button to access the settings page. Press the DOWN button to access the 3rd line titled Time Mode. Press the RIGHT/LEFT button to switch between: 12 Hours (A.M./P.M.) or 24 Hours (Military Time). Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings.

4. DATE MODE:

Press the MENU button to access the setting page. Press the DOWN button to access the 4th line titled Date Mode. Press the RIGHT/LEFT button to switch between Month – Day – Year (Standard U.S. Mode).
Day – Month – Year (Standard European Mode).

Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings.

5. LANGUAGE:

Press the MENU button to access the setting page. Press the DOWN button to access the 5th line titled Language. Press the RIGHT/LEFT button to select a language (English, French, German, Dutch, Polish, Spanish, Italian and Welsh are available). Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings.

6. AUTO DIMMING:

Press the MENU button to access the setting page. Press the DOWN button to access the 6th line titled Auto Dimming. Press the RIGHT/LEFT button to switch between: Mid, Low, Off
Mid means the brightness automatically dims at 7:00 PM and brightens at 7:00 AM (For this mode, the brightness of the day is 50cd/m² and of the night is 10cd/m²)
Low means the brightness automatically dims at 7:00 PM and brightens at 7:00 AM (For this mode, the brightness of the day is 50cd/m² and of the night is 5cd/m²)
Off means the brightness does not change during the day and the night
(For this mode, the brightness of the day and the night is both 50cd/m²)

7. COLOR MODE:

Press the MENU button to access the settings page. Press the DOWN button to access the 7th line titled Color Mode. Press the RIGHT/LEFT button to switch between: White or Yellow. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings.

8. ALARM 1 SETTING:

Press the MENU button to access the settings page. Press the DOWN button to access the 8th line titled Alarm 1 Setting. Press the RIGHT/LEFT button to select the field to be modified. When the field is underlined with blue, use the UP/DOWN button to adjust the number. After the changes are complete, press the OK button to save the settings. Press the DOWN button to access alarm 1 frequency settings.

9. ALARM 1 FREQUENCY:

Press the DOWN button to access the 9th line titled Alarm 1 Frequency. Press the RIGHT/LEFT button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings. PLEASE NOTE: The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

10. ALARM 2 SETTING:

Press the MENU button to access the settings page. Press the DOWN button to access the 10th line titled Alarm 2 Setting. Press the RIGHT/LEFT button to select the field to be modified. When the field is underlined with blue, use the UP/DOWN button to adjust the number. After the changes are complete, press the OK button to save the settings. Press the DOWN button to access alarm 2 frequency settings.

11. ALARM 2 FREQUENCY:

Press the DOWN button to access the 11th line titled Alarm 2 Frequency. Press the RIGHT/LEFT button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings. PLEASE NOTE: The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

12. ALARM 3 SETTING:

Press the MENU button to access the settings page. Press the DOWN button to access the 12th line titled Alarm 3 Setting. Press the RIGHT/LEFT button to select the field to be modified. When the field is underlined with blue, use the UP/DOWN button to adjust the number. After the changes are complete, press the OK button to save the settings. Press the DOWN button to access alarm 3 frequency settings.

13. ALARM 3 FREQUENCY:

Press the DOWN button to access the 13th line titled Alarm 3 Frequency. Press the RIGHT/LEFT button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings. PLEASE NOTE: The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

14. ALARM 4 SETTING:

Press the MENU button to access the settings page. Press the DOWN button to access the 14th line titled Alarm 4 Setting. Press the RIGHT/LEFT button to select the field to be modified. When the field is underlined with blue, use the UP/DOWN button to adjust the number. After the changes are complete, press the OK button to save the settings. Press the DOWN button to access alarm 4 frequency settings.

15. ALARM 4 FREQUENCY:

Press the DOWN button to access the 15th line titled Alarm 4 Frequency. Press the RIGHT/LEFT button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings. PLEASE NOTE: The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

16. ALARM 5 SETTING:

Press the MENU button to access the settings page. Press the DOWN button to access the 16th line titled Alarm 5 Setting. Press the RIGHT/LEFT button to select the field to be modified. When the field is underlined with blue, use the UP/DOWN button to adjust the number. After the changes are complete, press the OK button to save the settings. Press the DOWN button to access alarm 5 frequency settings.

17. ALARM 5 FREQUENCY:

Press the DOWN button to access the 17th line titled Alarm 5 Frequency. Press the RIGHT/LEFT button to switch between: Off, Once, Everyday, Mon. to Fri, Weekend. Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings. PLEASE NOTE: The alarm will ring for 60 seconds and then go off on its own, or you can manually stop it by pressing any button on the back of the clock.

18. VOLUME:

Press the MENU button to access the settings page, Press the DOWN button to access the 18th line titled Volume. Press the RIGHT/LEFT button to increase or decrease the alarm volume (1-10). After the changes are complete, press the OK button to save the settings.

IMPORTANT & WARRANTY

The Digital Calendar Day Clock is packaged with a thin anti-scratch screen protector. Please feel free to peel it off using the pull-up tab. Please be sure not to apply pressure to the high quality non-reflective LED screen.

The Digital Calendar Day Clock is pre-set to Eastern Time. If you receive the clock in another time zone (e.g. Pacific, Mountain or Central), you will have to adjust the time by using these instructions.

Inside of the clock there's a small wetoh-type battery that can maintain the time running. It also makes the time display correctly when the clock restarts.

The Digital Calendar Day Clock has an Auto Switch-On Facility when connected to the power supply. To power the clock off or back on, press the On/Off button.

The Digital Calendar Day Clock does not change the time automatically for daylight savings time, and needs to be adjusted manually.

The Digital Calendar Day Clock has a 12-month warranty provided by the manufacturer. Non-artificial damage or defect of the device or AC adapter can be replaced during the warranty period.

SPECIFICATIONS

Dimension: 216 x 171 x 20mm
LED Size: 160 x 120mm . 8 Inches
Backlight: LED
IPS : 4:3
Net Weight : 345g
AC Power Adapter : Input 100 – 240V
AC Output DC: 5V – 1A

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT INSTALL THIS PRODUCT IN A CONFINED SPACE SUCH AS A BOOK CASE OR SIMILAR UNIT.

CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK ,DO NOT REMOVE THE COVER (OR BACK). NO USER – SERVICABLE PARTS INSIDE, REFER TO QUALIFIED USER PERSONNEL .